

# Model LP96, LP72, LP120 & SSLP96 Parts Manual



Operation, Warnings and Maintenance 3
Shield Assembly
LP724-5
LP96 & SSLP966-7
LP1207-8
Rotor Shaft Assembly
SSLP96, LP72, LP96, LP1207
PTO Shaft Assembly
LP72, LP96, LP1208
Driveshaft Assembly
LP72, LP96, LP1209
Chain Drive Assembly
LP72, LP96, SSLP96, LP12010-11
Hydraulic Drive Assembly
SSLP9612

INDEX-

## **PULVERIZER**

The Creekview LP Series pulverizers are designed to help eliminate the cakes or crust in poultry barns. They are also a great tool to save litter by breaking up the cakes to help dry out litter without the need to take the cakes out of the poultry barn, therefore saving time and money. They are also a great tool to level litter for your next flock.



#### 1 YEAR DRIVE TRAIN WARRANTY

SERIAL#

**DEALER** 



#### SETTING UP THE PULVERIZER

Attach 3 point arms to pins then attach drive line to tractor PTO. Set on level spot and adjust top link to where machine is slightly tilted up in front.

#### **MAINTENANCE**

Each machine is inspected and fluids topped off before shipment. Grease all 5 zerks after each use or after wash-down. Or grease every 10 hours of use. 2 pumps only!

1 zerk at each end of pulverizer rotor1 zerk at input shaft on chain box1 zerk on each end of PTO shaft

Check fluid level once before every use.

Chain box hydraulic oil

Gearbox 80 weight oil

#### **OPERATION**

When pulverizing, drop pulverizer to desired depth. Always lift pulverizer at end of house. Do not turn with pulverizer down in litter. Always throttle tractor down before raising machine. For best performance drive 1-2 mph.


## **WARNINGS & SAFETY**

Always make sure nobody is within 25' of tractor or pulverizer before engaging PTO and during operation of machine.

Always have pulverizer sitting on ground and tractor shut off before servicing or washing.

Always have all safety shields on machine closed before engaging PTO.

Always secure PTO safety chain before operating machine.

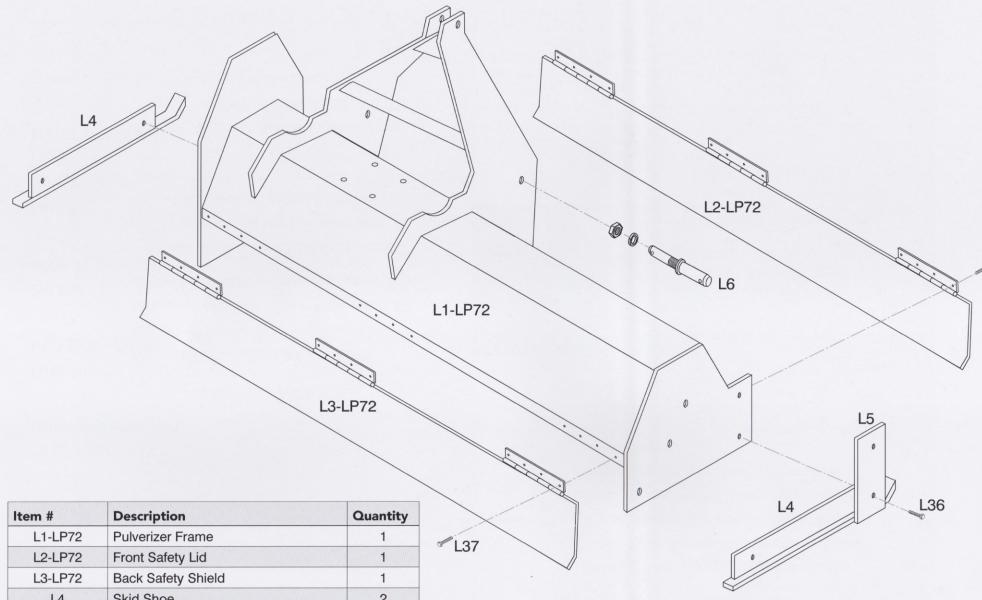


Item #	Description	Quantity
L1-LP72	Pulverizer Frame	1
L2-LP72	Front Safety Lid	1
L3-LP72	Back Safety Shield	1
L4	Skid Shoe	2
L5	Wall Wear Strip	1
L6	3 point pin cat. 1 & 2	2
L36	Cap Bolt 1/2" x 11/2"	2
L37	Flange Bolt 1/4" x 3/4"	32 SSLP96

Cap Bolt 1/2" x 11/2"

Flange Bolt 1/4" x3/4"

L36

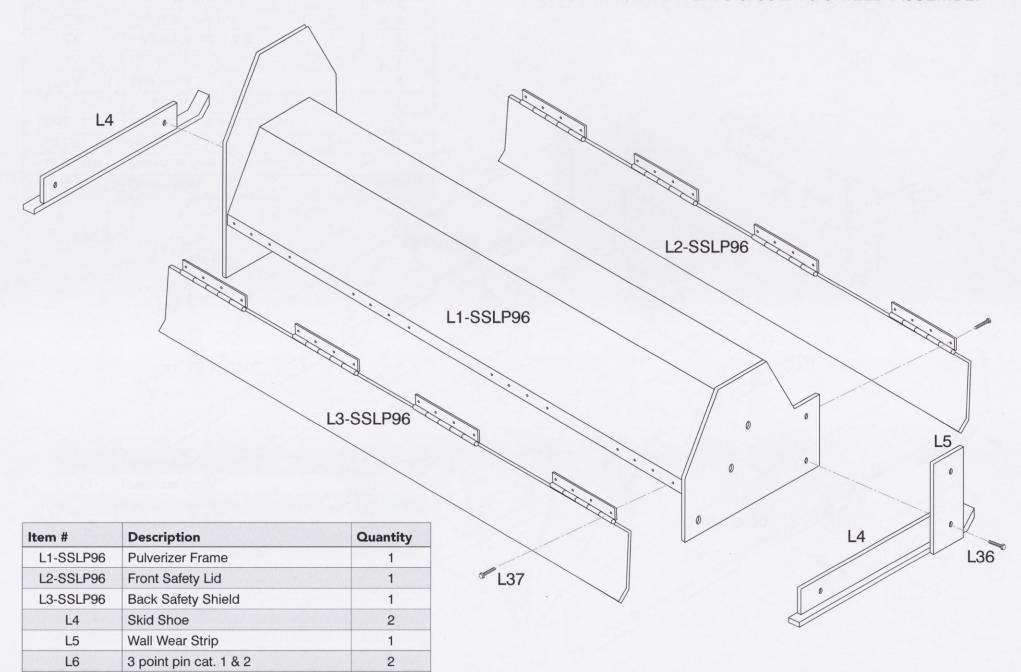

32 SSLP96

L6


L36

L37

3 point pin cat. 1 & 2

Cap Bolt 1/2" x 11/2"

Flange Bolt 1/4" x 3/4"

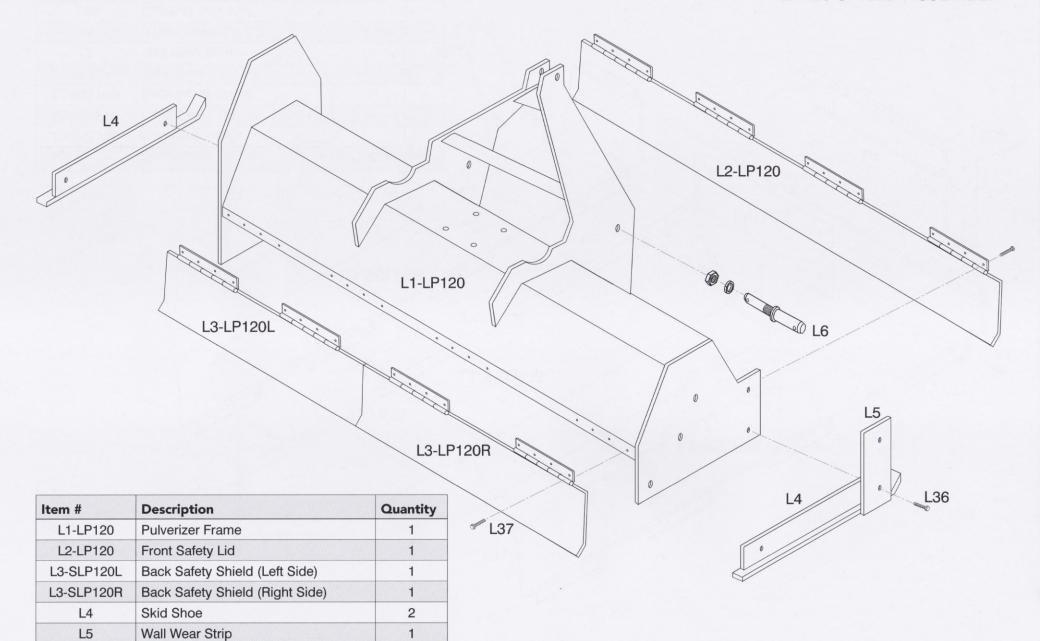


2

2


32 LP120

L16

Bolt 5/8"x2"

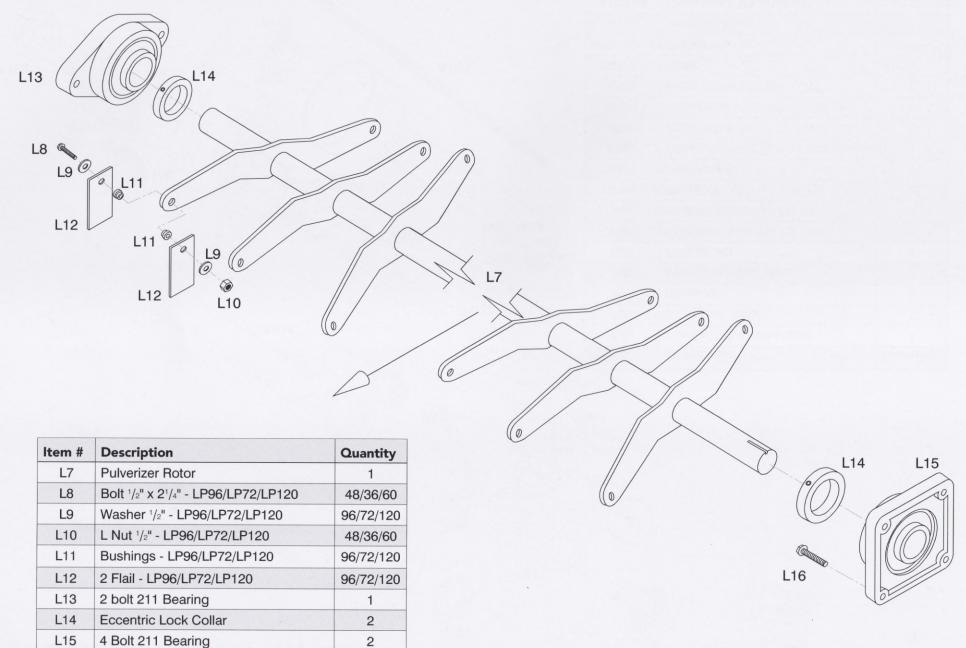


10

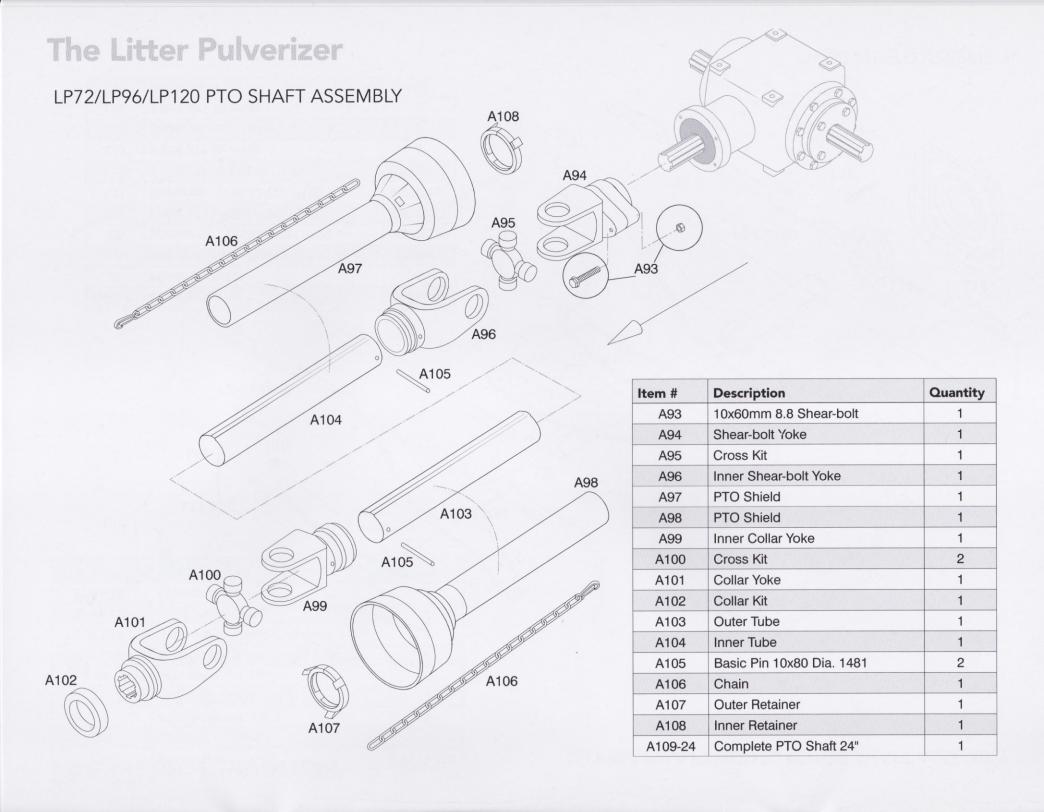



# The Litter Pulverizer

## LP72/LP96/LP120 DRIVESHAFT ASSEMBLY

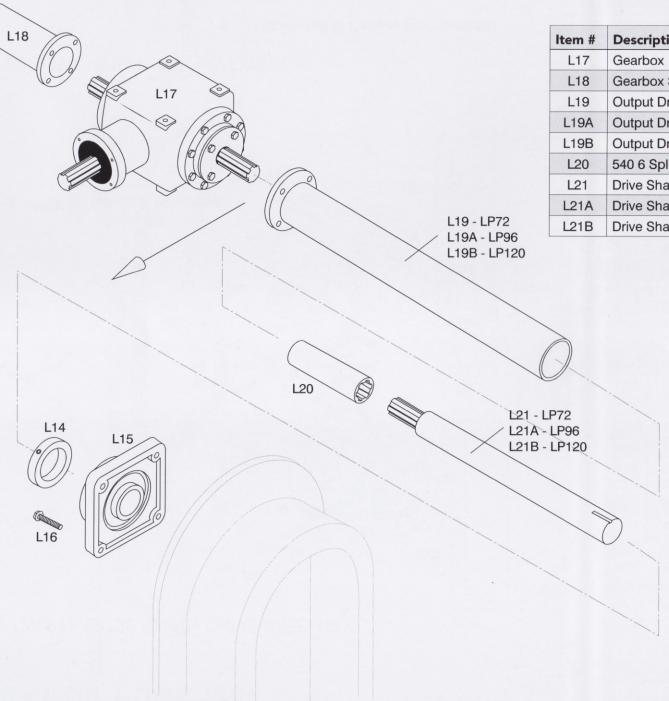

Item #	Description	Quantity
L17	Gearbox	1
L18	Gearbox Shaft Cover	1
L19	Output Drive-line Cover - LP72 (11")	1
L19A	Output Drive-line Cover - LP96 (35")	1
L19B	Output Drive-line Cover - LP120 (46 <sup>7</sup> / <sub>8</sub> ")	1
L20	540 6 Spline Connector	1
L21	Drive Shaft - LP72 (133/4")	1
L21A	Drive Shaft - LP72 (373/4") 96	1
L21B	Drive Shaft - LP72 (495/8") 120	1

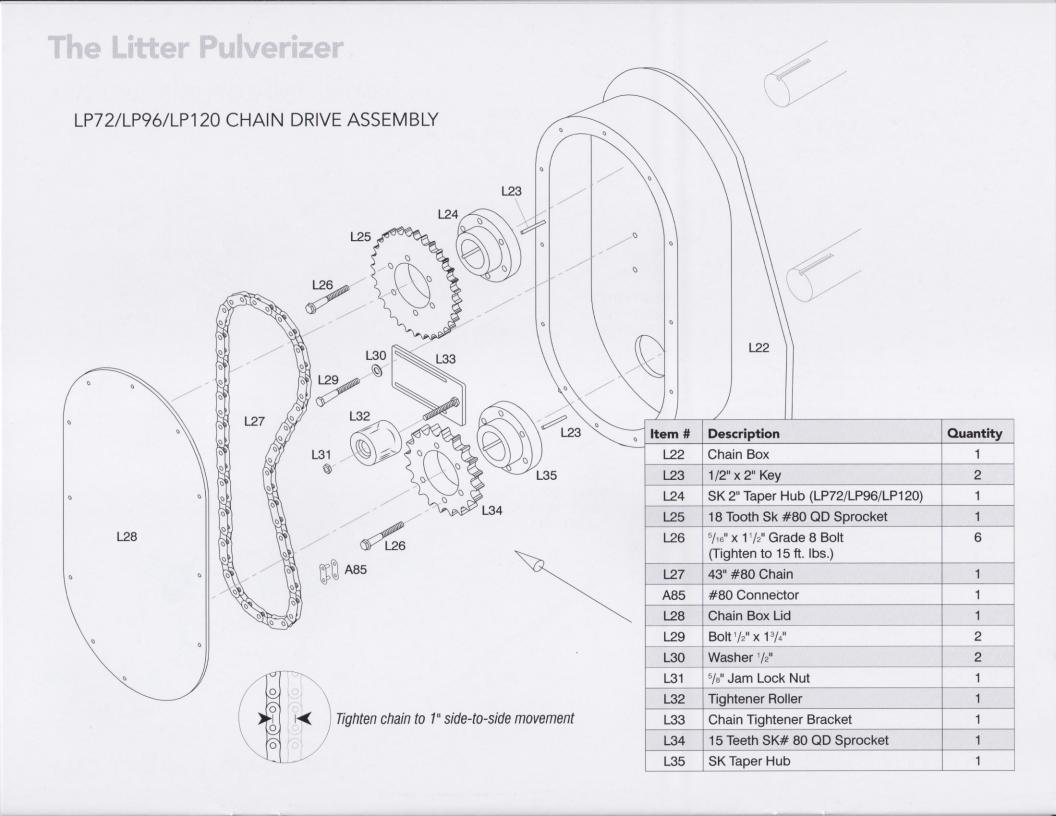


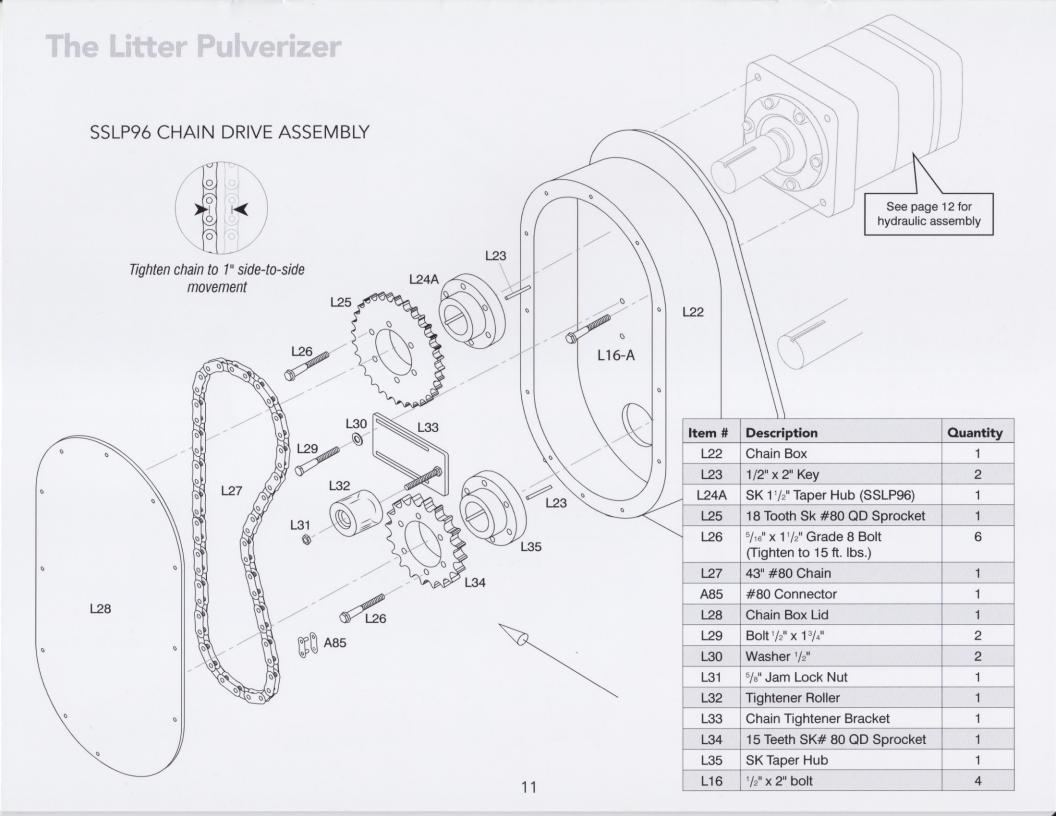

# The Litter Pulverizer

## SSLP96 HYDRAULIC DRIVE ASSEMBLY

Item #	Description	Quantity
SLH 1	1064 Hydraulic Motor	1
SLH 2	16MJX X 16MB Fitting	2
SLH 3	12MP-16FJX Fitting	1
SLH 4	16MJ-16FJX-16MJ Adapter	2
SLH 5	LT 75 <sup>3</sup> / <sub>4</sub> " Gresen Check valve	1
SLH 6	16MJ-16 FJX-4FP Gage port adapter	1
SLH 7	Zilga A -15 Base mount Gauge	1
SLH 8	30" #12M3K-12FPX Check valve Line	1
SLH 9	8' 12MP-16FJX90 Pressure Hose	1
SLH 10	8' 12MP-16FJX Return Hose	1
SLH 11	1/2" - 3/4" F Flat face female coupler	1
SLH 12	1/2" - 3/4" F Flat face Male coupler	1

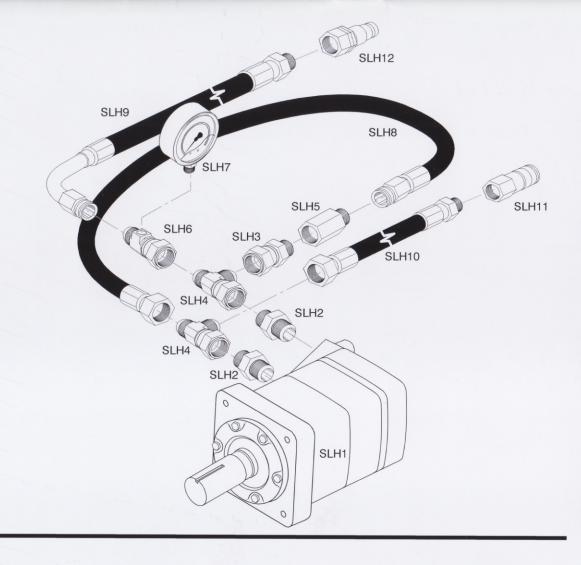





# **Quality built equipment**







